

- Corrosion resistant PVDF
- Senses pulsating metering pump flow
- Adjustable, in-line

Flow range: ml/stroke Max. LMI Pump Output
 0.1 - 5.0 7.9 GPH (30.0 l/h)

- Usable as Adjustable Flow Switch for non-pulsating flow
- Economical
- For LMI Pumps with 300, 400, 700, 800 and 900 Series Liquid Ends

Pulsating flow of your pump can be monitored and transmitted using the LMI Digi-Pulse™ Flow Monitor. Designed to electrically signal a low flow or no flow condition, you can be assured of your pumping performance; an advantage when working with pulsating or very low flows. A transmitter can be connected to a remote counting or recording device. The FM-PRO-9 transmitter is wired to be plugged directly into the flow monitor input, mounted in the Series B9 or C9 pump housing. Plug the FM-ROY-9 directly into the flow monitor input (4-pin connection) on the ROYTRONIC EXCEL™ Series AD9 metering pump housing. The FM-ROY is adjustable to any desired pulsating flow rate within its range.

SPECIFICATIONS			
Flow Range	ml/stroke 0.1 - 5.0	Max. LMI pump output 7.9 GPH (30.0 l/h)	
Max. Pulse (stroke) Rate	240 per min	240 per minute	
Max. Pressure	150 psi (10	150 psi (10 Bar)	
Transmitter	Reed Switch (No Flow = N.O. Switch Condition) Polarity Independent Minimum pulse width 15 msec		
Max. Load	100 mA AC	100 mA AC or DC, 36V max.	
Cable Length	10 ft (3 m) FM-PRO, FM-ROY 20" (0.5 m) FM-PRO-9; FM-ROY-1, FM-ROY-9		
Body Material Valve Fitting Material	PVDF		
	Carbon Fiber Reinforced PVDF (where supplied)		
Seals & O-Rings	POLYPREL	® (PTFE copolymer)	

CONFIGURATIONS		
Model No.	Connection	
FM- PRO	Supplied with single ball lower valve fitting (for use with legacy 3FVs or 4FVs)	
FM-PRO-9	Supplied with single ball lower valve fitting (for use with legacy 3FVs or 4FVs and Series B9 or C9 pumps)	
FM-ROY	Supplied with double ball lower valve fitting (for use with new 4FVs and ROYTRONIC® Series A metering pumps)	
FM-ROY-1	Supplied with double ball lower valve fitting (for use with new 4FVs and B9 and C9 pumps)	
FM-ROY-9	Supplied with double ball lower valve fitting (for use with new 4FVs and ROYTRONIC EXCEL™ Series AD9 metering pumps	

### Accessory:

Right Angle Adapter Assembly P/N 49216 is designed for tight corners and orients the DIGI-PULSE™ Flow monitor series FM-PRO or FM-ROY vertically when used with AUTOPRIME™ Liquid Ends.




201 Ivyland Road Ivyland, PA 18974 TEL: (215) 293-0401 FAX: (215) 293-0445 www.lmipumps.com

## Instruction Sheet

# DIGI-PULSE™ Flow Monitor Series FM-PRO and FM-Roy

- With your pump turned off, screw the lower valve fitting of the DIGI-PULSE™ Flow Monitor to the discharge side of the pump head.
- Remove the red Caplug from the top of the DIGI-PULSE™. Be sure to save the O-ring seal and spacer.
   Attach your 3FV or 4FV to the top of the DIGI-PULSE™.
- 3. Connect the DIGI-PULSE™ cable to your counter, computer, or other recording device (polarity is not critical). If cable extension is desired, consult factory. Plug the FM-PRO-9 cable directly into the receptacle in the Series B9 or C9 pump housing. Plug the FM-ROY-9 directly into the flow monitor input (4-pin connection) within the ROY-TRONIC EXCEL™ Series AD9 metering pump housing.
- Loosen the locknut of the flow-range knob of the flow monitor and set the knob to the largest dot. Start the

**Note:** The FM-PRO is designed for a single ball fitting. The FM-ROY is designed for a double ball fitting.

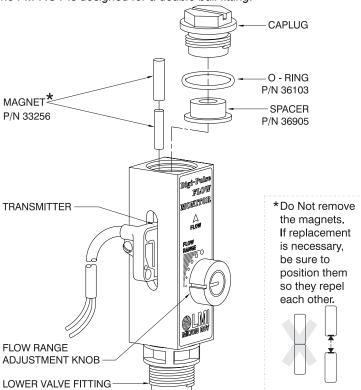


- pump and adjust it (calibrate, if necessary) for proper output to satisfy your system requirements.
- 5. With the pump running, gradually turn the adjustment knob of the flow monitor counter-clockwise ✓ until the sensor just begins to trigger your electronic device. This will be the most sensitive setting of the DIGI-PULSE™, given your pump setting and fluid properties. Every stroke of the pump will output enough volume of solution to cause the DIGI-PULSE™ flow monitor to register a pulse. If the flow drops below the initial pump setting, the DIGI-PULSE™ will no longer register strokes to your electronics, indicating some type of pump failure or low-level condition.
- Tighten the adjustment locknut without altering the adjustment position.

#### Note:

After the initial pump and DIGI-PULSE<sup>TM</sup> setup is complete, any adjustment of the stroke length of the pump (output per stroke) will require a readjustment of the DIGI-PULSE<sup>TM</sup> flow monitor (repeat steps 4-6 above).

### To change the flow range setting:

A set screw holds the transmitter body in a notch on the side of the flow monitor. Remove the screw and washer and slide or turn the transmitter 180° to an alternate position and tighten the screw and washer in the hole to secure the transmitter. The DIGI-PULSE™ Flow Monitor comes factory set at the "LOW" setting which should accommodate most applications. However, the "INTERMEDIATE" or "HIGH" settings may be appropriate for a particular application if the sensor does not trigger in the "LOW" setting.

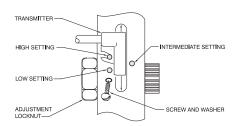



201 Ivyland Road Ivyland, PA 18974 TEL: (215) 293-0401 FAX: (215) 293-0445 www.lmipumps.com