

## INSTALLATION INSTRUCTIONS

### RI-6 WHEEL & HANDLE KIT

FOR WARRANTY REGISTRATION CALL: 1-800-245-4777  
RICEHYDRO.COM



#### RECOMMENDED TOOLS

1/2" & 7/16" WRENCH

1/2" & 7/16" SOCKET/RACHET



#### PARTS LIST

(2) 4" RIGID CASTERS



(1) V-REST FOOT ASSEMBLY



(1) HANDLE



(4) 1/4" X 20 LOCKNUTS



(6) 5/16" X 18 LOCKNUTS



(2) 5/16" FLAT WASHERS



(8) 1/4" FLAT WASHERS



(4) 1/4" X 20 X 3/4" BOLTS



(4) 5/16" X 18 X 1 & 3/4" BOLTS




(2) 5/16" X 1" BOLTS



# ASSEMBLY INSTRUCTIONS

## Step 1. INSTALLING (1) HANDLE

Connect HANDLE on the inside of frame using existing holes as shown below. Insert a BOLT, 2 WASHERS, & 1 LOCKNUT in each of the 4 existing holes. Use Wrench/Ratchet to tighten.

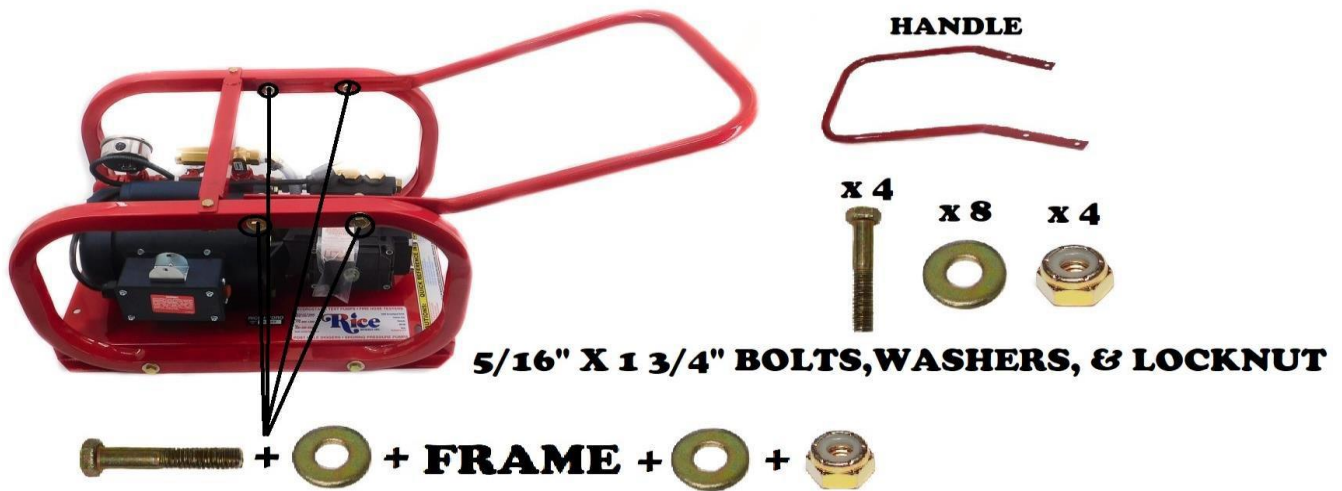

## Step 2. INSTALLING (2) 4" RIGID CASTERS

Place 4" RIGID CASTERS under base as shown below. Insert a BOLT, 2 WASHERS, & 1 LOCKNUT in each of the 4 existing holes. Use Wrench/Ratchet to tighten.



## Step 3. INSTALLING V-REST FOOT

Place V-REST FOOT under base using existing holes as shown below.

Insert a BOLT, 2 WASHERS, & 1 LOCKNUT in each existing holes. Use Wrench/Ratchet to tighten.

